# Magply Taping and Skimming Instructions

**1** Boards should be primed with Magply Super Penetration Primer applied by roller. We specifically do not recommend PVA based primers.

**2** Board joints must be taped using paper strips bedded in wet multi finish plaster.

**3** Cover the tape in accordance with plaster manufacturer's instructions normally minimum 12" /300ml wide strip.

**4** Proceed to apply multi finish skim coat as normal to the area.

**5** Trowel up to conclusion.

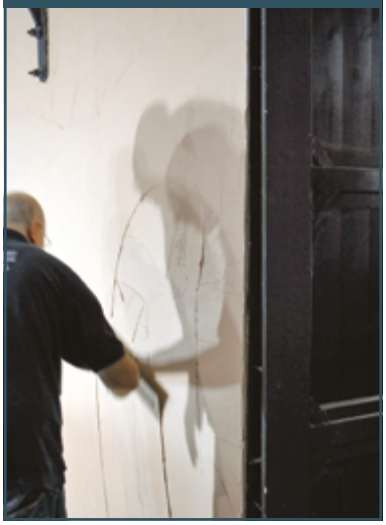

**6** Paint or finish as required.

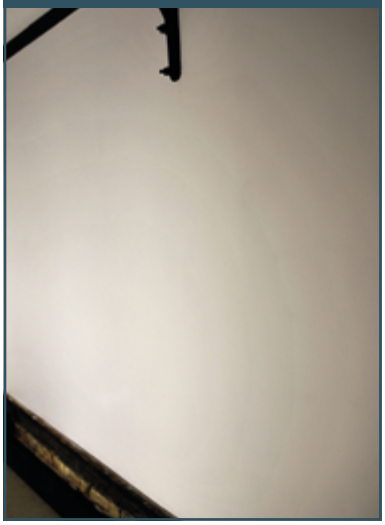

ENVIRONMENTALLY FRIENDLY

MOULD RESISTANT

BREATHABLE

EUROCLASS A1 PERFORMANCE

STRONG AND EASY TO USE

MOISTURE PROTECTION

01621 776252 01621 776688 sales@magply.co.uk www.magply.co.uk